



LS “ANGLED COIL” VALVE COVERS

241-92 – Natural Cast Finish

241-93 – Polished Finish

241-94 – Black Krinkle Finish

INSTRUCTION SHEET P/N 199R10749

PARTS LIST:

QUANTITY	DESCRIPTION
2	LS valve covers
1	Bracket kit (for applications w/ high-mount alternators)
1	Warranty statement 90-day
1	Instruction sheet

APPLICATIONS:

Fits all LS Engines using LS2, LS3, LS7 or similar coils with 72mm bolt spacing – for dry sump applications – no oil fill allowance provided

OPTIONAL PARTS:

Purchasing new gaskets and grommets is recommended, but is not required. Replacements can be purchase at your local parts supplier:

Gaskets (set of 2):

Fel-Pro part # VS50504R

Grommets (set of 8):

Fel-Pro part # ES71044

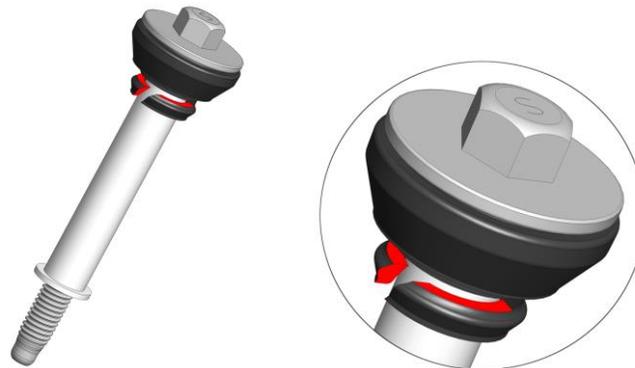


Figure 1

NOTE: Aged grommets will likely tear during the removal and reinstallation processes. The area that is affected is only for temporary retention during installation and will not hurt the sealing function of the grommet.

INSTALLATION:

1. Before beginning, blow any loose debris off the engine using an air hose.
2. Disconnect the battery.
3. Remove any cosmetic engine/coil covers. Refer to the vehicle's service manual for proper removal procedure. If these covers mount to the original valve covers, they cannot be reinstalled.
4. Disconnect the plug wire from each coil by twisting and pulling on each wire boot.
5. Disconnect the main coil harness plug.

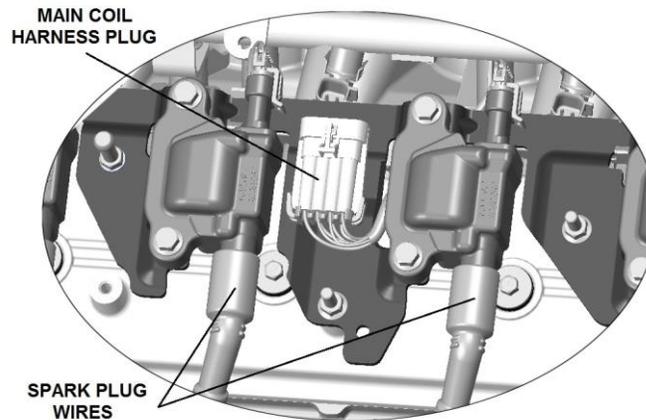


Figure 2

6. Remove the coils, coil brackets, coil harnesses, PCV hose, and valve covers from the vehicle.
7. Remove the original gaskets by gently pulling them out of the valve cover grooves.
8. Remove the valve cover bolts and grommets by carefully working the grommets out of the original valve covers. The original grommets will have softened and swelled with age.

NOTE: If reusing the original grommets and gaskets, clean with only mild soap and hot water. Chemicals may damage the material and greatly affect their sealing ability.

9. Reinstall the gaskets by working them into the grooves on the Holley valve covers. The gaskets will be long compared to the grooves and will need to be evenly worked around the cover distributing the extra length. Press firmly to properly seat the gasket.
10. Reinstall the bolts and grommets by carefully working them into the Holley valve covers.
11. Install the Holley valve covers on the engine making certain the gasket remains seated in the valve cover groove. Evenly torque the cover bolts to 12 Nm (106 lb/in).

NOTE: The Holley valve covers are designed to be used with rocker arms and lift ratios compatible with stock valve covers. If using aftermarket valve train components, refer to the manufacturer's instructions for compatibility.

12. Remove the corresponding 1/8" NPT threaded plug on the Holley valve cover for the PCV connection. Use AT981662ERL (1/8" NPT to -6AN) to adapt to AN type PCV plumbing. If the OE 3/8" ID hose is being used, also add AT709167ERL (-6AN to 3/8" barb).

NOTE: Some applications, as pictured below, have internal PCV restrictions inside the cover assembly. If your application utilizes this type of connection, an external PCV valve must be added in-line on the hose. If needed, suggested PCV valves are: (1) Beck/Arnley P/N 0450299 or (2) Fram P/N FV340.



13. Remove the individual coils from the original bracket and install each onto the Holley valve covers. Torque coil bolts to 12 Nm (106 lb/in).
14. Remove the coil harnesses from the original brackets and plastic conduits. Reconnect the coil harnesses to the coils. Make sure the coil harnesses are not switched to the opposing sides. If harnesses are accidentally switched, the firing order will be wrong. Neatly tuck the harnesses into the engine valley and retain with wire ties.
15. Reinstall the spark plug wires and rotate the boots for maximum exhaust clearance and visual appeal.
16. Make sure all electrical connections are secure and reconnect the battery.
17. Start the vehicle and verify that there are no oil leaks.

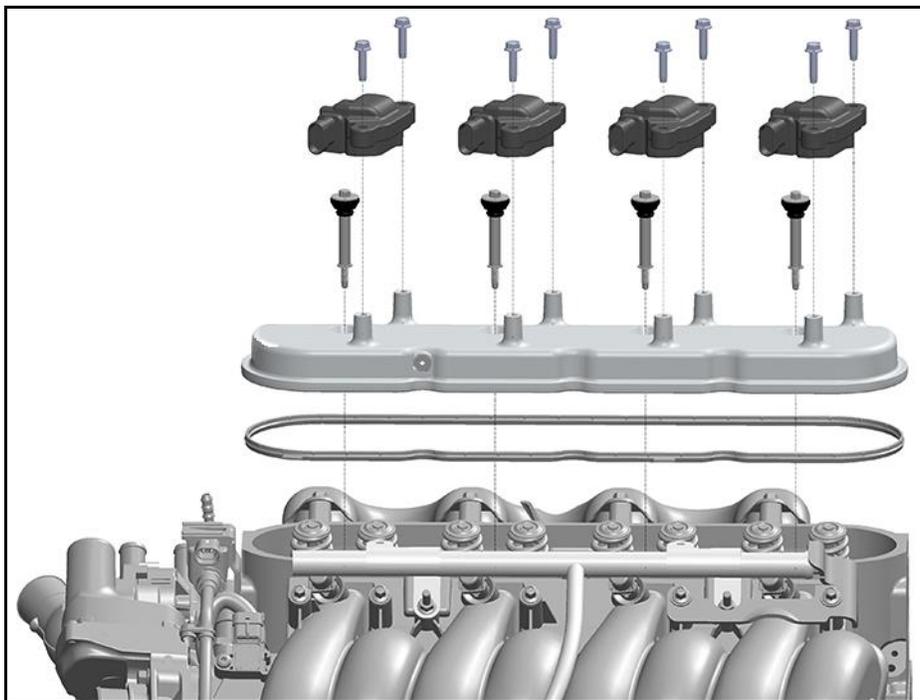


Figure 3

OPTIONAL OFFSET BRACKET:

NOTE: For applications with high-mounted driver's side alternators, the supplied offset bracket kit should be installed.

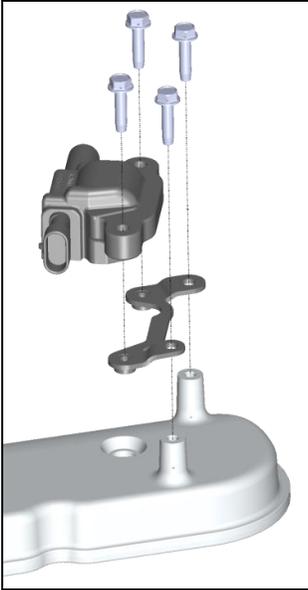


Figure 4

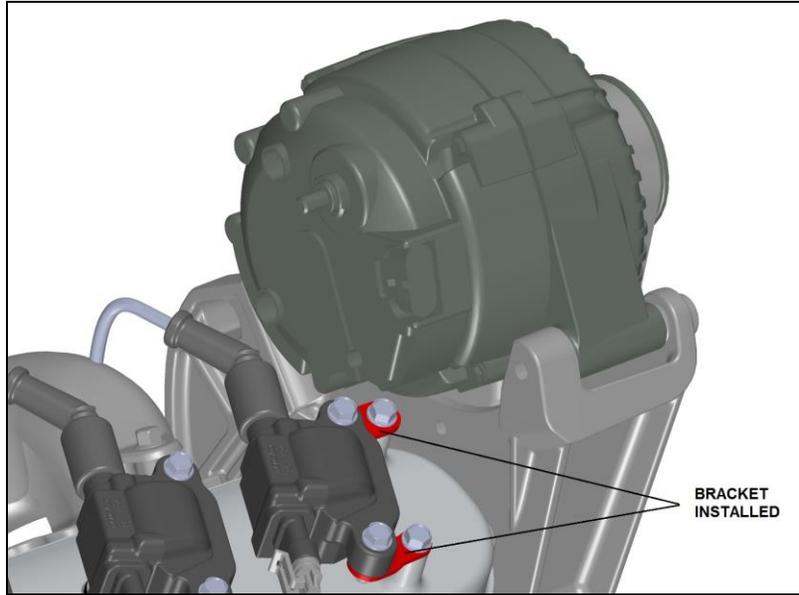


Figure 5

**Holley Technical Support
1801 Russellville Road
Bowling Green, KY 42101
270-781-9741 or 1-866-464-6553
www.holley.com**

**199R10749
Date: 1-6-15**