




P/N: 280-SW-IQ3BTN
IQ3 Remote Buttons with Coil Cord
Installation Instructions

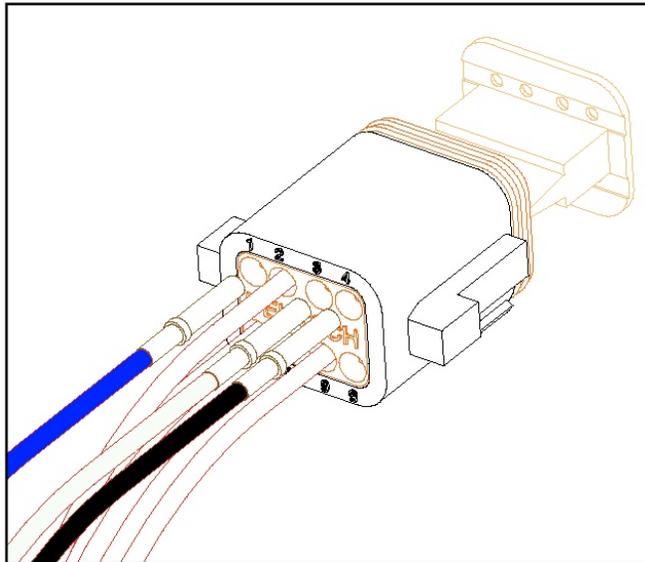

- 1) Use a small flat blade screwdriver to remove the plastic orange wedge from the front of the connector.
- 2) Inside the connector you will see a lock for each wire. Use a screwdriver to pull back on the lock and remove the factory installed blue, white and black wires from positions 1,3 and 4.
- 3) Locate the remote button panel connector. Reinstall the blue, white and black wires on the remote button panel connector in to positions 1,3, and 4 as shown in the illustration above.
- 4) Reinstall the orange wedge on the front of the connector.

**The two remote buttons are color coded.
Red is BUTTON 1 and Black is BUTTON 2.**